

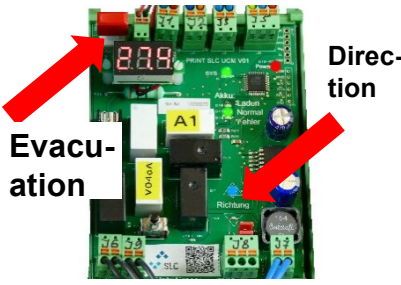



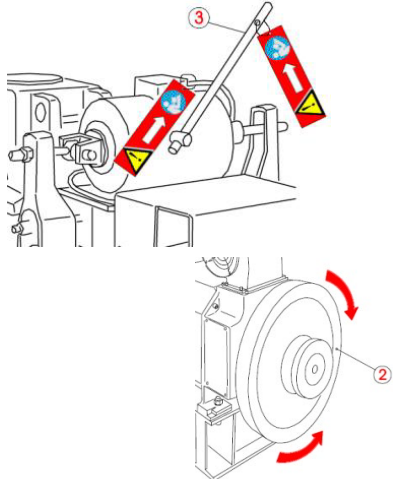
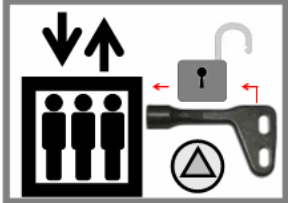



	<ul style="list-style-type: none"> <li>❖ The safety devices of the elevator must be in operation!</li> <li>❖ Only properly trained and authorized personnel may perform an evacuation using this procedure.</li> <li>❖ Manual operation of the elevator according to the following instructions is only permitted in EMERGENCIES!</li> <li>❖ Before leaving the control cabinet area, make sure that the elevator is switched off and the door of the control cabinet is closed and locked</li> </ul>
1.		<ul style="list-style-type: none"> <li>❖ Reassure passengers.</li> <li>❖ Inform passengers about further procedure.</li> <li>❖ The cabin door must be closed for the protection of passengers.</li> <li>❖ Make sure that all shaft doors are closed and then go to the engine room</li> </ul>
2.		<p><b>Ensure that:</b></p> <ul style="list-style-type: none"> <li>❖ the suspension ropes are properly seated in the grooves of the traction sheave</li> <li>❖ there are no persons in the shaft.</li> </ul>
3.		<p><b>Determine situation at the system:</b></p> <ul style="list-style-type: none"> <li>❖ Has the overspeed governor been triggered and/or the safety gear engaged?</li> <li>❖ If the safety gear is engaged, determine the direction of travel before the emergency stop. <ul style="list-style-type: none"> <li>- Blue LED: Travel up (To release, move the cabin downwards)</li> <li>- Yellow LED: Travel down (To release, move the cabin upwards)</li> </ul> </li> </ul>
4.		<p><b>Remove the hood on the MOD kit</b></p> <ul style="list-style-type: none"> <li>❖ If the ENA3 module indicates an error: <ul style="list-style-type: none"> <li>- Record error code(see inside of hood)</li> <li>- Press green RESET button (see picture)</li> </ul> </li> <li>❖ Press the red evacuation button for 5 - 6 seconds. <ul style="list-style-type: none"> <li>- Solenoid on overspeed governor pulls in</li> <li>- Green LED "ON" lights up</li> <li>- Green LED "SYS" flashes</li> </ul> </li> </ul>
5.		<ul style="list-style-type: none"> <li>❖ Evacuation with return control</li> <li>❖ Ensure that the main switch is turned on</li> <li>❖ Inform passengers about the further procedure and point out that the cabin will move.</li> <li>❖ Move the car to the next floor using the return control. <ul style="list-style-type: none"> <li>- LED "ZONE" at the ENA3 module lights up</li> </ul> </li> <li>❖ <b>If the cabin has moved,</b> Switch off and secure main switch and continue with step 8</li> <li>❖ <b>If the booth has <u>not</u> moved, continue with step 6</b></li> </ul>

6		<p><b>Manual evacuation</b></p> <p><b>CAUTION RISK OF FALLING</b> <b>CAUTION Cabin cannot move up or down</b></p>
7.		<ul style="list-style-type: none"> <li>❖ Observe the direction of rotation label on the motor</li> <li>❖ Hold the wheel (2), carefully open the brake with the brake release lever (3) and observe the and observe the direction of rotation of the wheel (2).</li> <li>❖ Slowly move to the next floor by turning the wheel (2) and close the brake again.</li> <li>❖ Slowly drive to the next floor by turning the wheel (2) and close the brake again..</li> </ul> <p><b>ATTENTION: Release brake release lever (3) immediately in case of rapid increase in speed!</b></p>
8		<ul style="list-style-type: none"> <li>❖ Go to the landing door on the floor where the booth is located. Open the landing door manually with the triangular key: Passengers can exit the car.</li> <li>❖ Inform passengers that there is a risk of tripping when they leave the cabin.</li> </ul>
9.		<ul style="list-style-type: none"> <li>❖ Close the landing door and make sure that it is closed.</li> </ul>
10.	<p><b>Evacuation</b></p> 	<ul style="list-style-type: none"> <li>❖ To end or cancel the evacuation, press and hold the RED EVACUATION BUTTON for 8-11 seconds.</li> <li>❖ Alternatively, the solenoid on the overspeed governor drops after 30 minutes at the latest.</li> </ul>
11.		<ul style="list-style-type: none"> <li>❖ <b>CALL REPAIR SERVICE!</b></li> <li>❖ <b>THE LANDING DOOR MUST BE LOCKED!</b></li> <li>❖ <b>THE MAIN SWITCH MUST BE TURNED OFF</b></li> </ul>
<p><b>Name and phone number of maintenance company</b></p>		